

Bailer Installation Instructions*

Inside Mounted Bailers

INSIDE MOUNTED BAILERS

IB-E101 Super Mini

IB-E101 Super Mini Special (Remote Operation)

IB-E200 Super Medium

IB-E300 Super Maxi

1. Select desired location for the bailer (consider class rules are applicable). Mark outline of the bailer using the supplied template.
2. Cut the hole for the bailer with a jigsaw. Fill and seal the cut surfaces with a waterproofing agent to ensure water ingress is minimised.
3. Mark the mounting holes by installing the bailer into the hole just cut.
4. Drill out the mounting holes as required:
RA554131 Super Mini - 4 holes @ 5.5mm (7/32") diam.
RA435200 Super Mini Special - 4 holes @ 5.5mm (7/32") diam.
RA554132 Super Medium - 6 holes @ 5.5mm (7/32") diam.
RA554133 Super Maxi - 6 holes @ 5.5mm (7/32") diam.
5. Mount the bailer in position using a marine grade sealant or waterproofing product around the contact surface between the bailer and the hull.
6. Affix the bailer with nuts and bolts provided, applying silicon to the bolt holes and using the provided 1mm or 2mm gasket depending on hull thickness.
7. Bolts should be cut to length and smoothed following installation.

See Service Kit Installation sheet for gasket replacement.

*Cutting and installing through-hull and skin fittings should be conducted by appropriately skilled or qualified individuals.