

INSTRUCTIONS FOR THE REPLACEMENT OF THE SEAL
IN THE SUPER SHUTE BAILERS

Note that the Seal can be replaced with the Bailer either fitted or removed from the boat.

1. Release the Seal Clamp by removing the 10/12 Screws (depending on model).
2. Open the Bailer and Pull the Soft Black Seal out of its Seat and off over the bottom of the Shute.
3. Assemble the new Seal making sure that the Flap in the Shute is shut, and that the Large Ridge is touching the seat at the same end as the Flap. Press the Seal down flat into its Seat.
4. Assemble the Seal Clamp, making sure that the short side which is narrower is at the same end as the Flap. Replace the 10/12 Screws (depending on model).
5. Close the Bailer.

